

I N D O O R
I N S T A L L A T I O N G U I D E



A STYLISH AND DURABLE SOLUTION TO
ENHANCE YOUR INTERIOR SPACES

TABLE OF CONTENTS

- 3 INTRODUCTION
- 3 MATERIAL AND PREPARATION
- 3 NECESSARY TOOLS
- 4 FURRING INSTALLATION
- 4 PANELING INSTALLATION: TECHNIQUES AND TIPS
- 5 LENGTH ARRANGEMENT AND BUTT JOINTS
- 5 TIPS FOR A DURABLE RESULT

ELEGANCE



INTRODUCTION

Wood paneling provides a timeless and warm style, fitting seamlessly into both modern and rustic spaces. This practical guide will walk you through the installation process step by step.

MATERIAL AND ROOM PREPARATION

- Once you receive your materials, store them indoors for 7 days before beginning installation. Ensure protective films are placed between the rows to avoid scratches. Keep the package secured with nylon straps until installation.
- After each day's work, re-secure the coverings to prevent deformation or warping, which could compromise the final quality of the installation.

NECESSARY TOOLS


- Wooden paneling
- Spruce furring strips (1x3)
- 7/16" x 2" staples
- Electric miter saw or miter box with a hand saw
- Finishing blade
- Hammer, nailer and stapler
- Quarter-round and finishing trims

FURRING STRIPS INSTALLATION

Furring strips create an air space behind the panels. Install them perpendicular to the panel direction (e.g., horizontally for vertical panels). Secure them at regular intervals, about 16 inches (40 cm) apart.


PANELING INSTALLATION: TECHNIQUES AND TIPS

- **Tongue and Groove System:** Each board is designed to interlock with a male side (tongue) and a female side (groove). Nail at a 45° angle into the tongue to firmly secure each board.
- **Nailing the First Board:** Nail the first board directly to the wall. The nails will be hidden by the finishing quarter-round trim.
- **Board Adjustments:** Cut the boards, leaving a 1/4-inch gap at the base of the wall to allow for wood movement. This gap will be concealed by the trim.

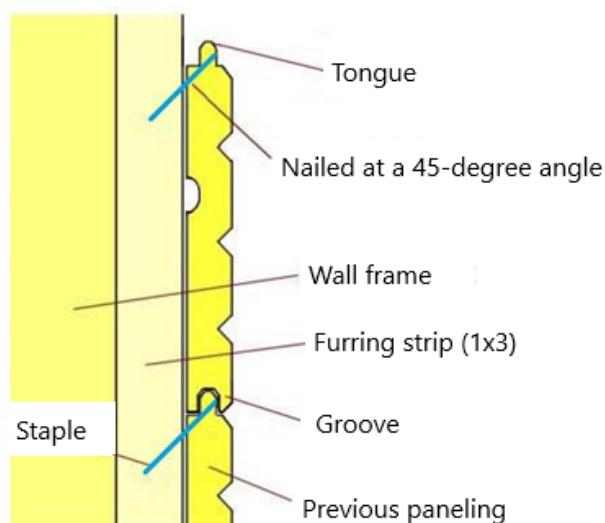

LENGTH ARRANGEMENT AND BUTT JOINTS

- **Random Joint Distribution:** Avoid aligning joints across multiple rows. Mix short boards between longer ones for a natural effect.
- **Staggered Joint Arrangement:** Use tongue-and-groove boards to maximize wood usage and distribute joints randomly.

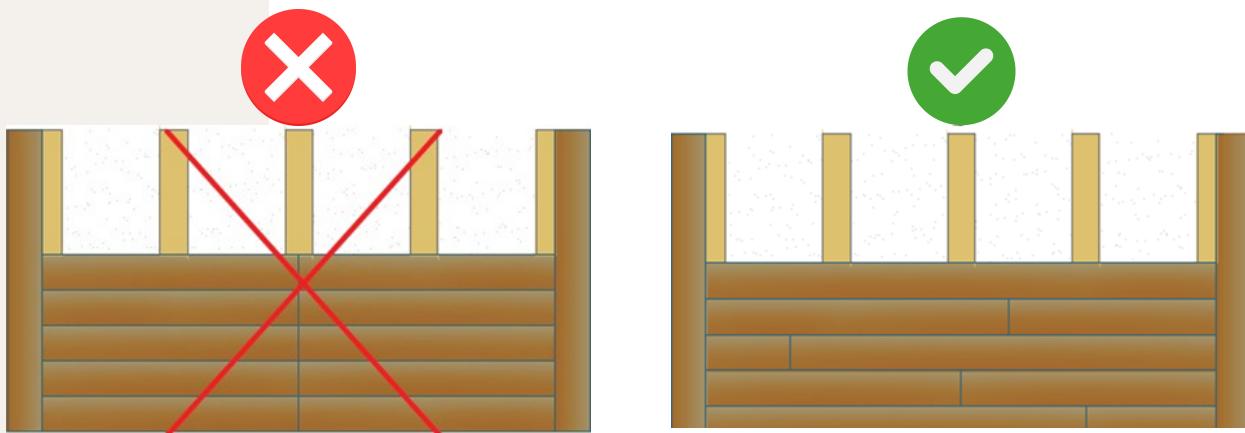

FINISHING AND ADJUSTMENTS

Trims and Quarter-Rounds: Install trims along the walls for a neat finish. Place quarter-rounds at the base of walls to hide the gaps left near the floor.

TIPS FOR A DURABLE RESULT

Maintain stable indoor humidity to minimize shrinking or expanding of the panels.



THANK YOU

Thank you for choosing our products for your project. We hope these instructions will help you achieve a successful and durable installation. Feel free to share your results or reach out to our team with any questions.

CONTACT INFORMATION

Website: www.justedupin.com

Email: info@justedupin.com

Phone: 450-588-6668

Juste du Pin

